

CD PLAYER w/ Bluetooth



CONTENT	FEE
Arafuna portable CD player with built in speaker	\$65
Carrying case	\$15
USB to type C charging cable	\$10
3.5 to 3.5 mm Aux cable	\$10
User manual	--

Please return at the Adult Reference Desk

CD PLAYER w/ Bluetooth



Circulation	3 weeks
Renewals	1x
Overdue fines	\$3



QUICK GUIDE

CD PLAYER

with bluetooth

Arafuna CD5194B

 
31030155089014

Charge

Red light = charging


Green = fully charged

connect charging cable to USB port/charger to charge

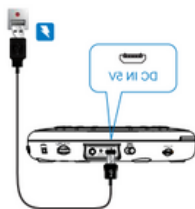


Power on

 Push the power switch to ON. The player will enter standby mode after 20 seconds with no use, restart by pressing play.

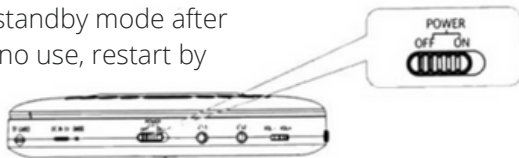

Play disk

 When NOD is displayed on the screen, check if the disc is placed correctly in the player.

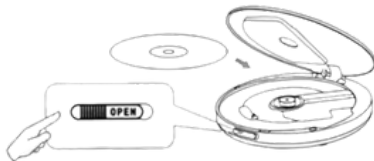

Connect Bluetooth



On your speaker or headset, confirm device is on and ready to connect.

On the CD player, press the Bluetooth button. If Bluetooth is off, press the Play button to turn on.

 


Select the Bluetooth Search option and press the play button. The player will start searching for nearby devices that can be paired.



Press the play button to select the name of the device you need to connect to.

After connecting, press the Bluetooth button to return to the play interface.



use AUX cable to connect if Bluetooth fail to pair to car

Last memory

Use the Play/Pause button or turn CD player off to return to the last stop-track on the disc. The STOP button returns play to the first track on the disc.

MODE

Each time MODE button is pressed,
the order of the tracks played will be:

1 =Repeats current track

ALL =Repeats all tracks

RAND=Random play

INTRO=First 10 seconds per each track

EQ

Press to change sound effects: BBS (bass), POP,
JAZZ, ROCK, and CLASSIC



Next button: short press ; Fast forward: long press



Previous button: short press ; Rewind: long press

PROG

Enters programming mode. Press PREVIOUS or
NEXT buttons to select the track you want to
program, press PROG again to confirm the
programming. Then press PLAY button to enter the
programming play mode. Press the STOP button to
enter the stop mode to cancel or reprogram.

HOLD

Locks the operation of all the keys. Found under the
CD player.

AUX

**Plug cable into headphone port to
connect to home theater, or car.**

-VOL+

Located next to the headphone port.